

Wood Cleaner



Wood cleaner all treated or untreated water-resistant wooden surfaces, such as garden furniture, wooden floors and patios. Particularly rich and gentle. 5 litre container.

Properties



- For cleaning all sensitive water-resistant wooden surfaces, can be used universally
- Dissolves oil/grease and mineral stains
- Removes algae, soot and mineral-based residues
- Quick and efficient cleaning in combination with a Kärcher high-pressure washer
- Extremely gentle on materials
- Tensides biodegradable in accordance with OECD
- pH value in concentrate approx. 9
- Ready to use cleaning agent (RTU)
- Can also be used manually

Areas

- Wooden floors
- Terrace
- Tables and chairs

Application

- High-pressure washers
- Manual

Application:

High-pressure washers

- Mix 1 part detergent with 5 parts water
- Vacuum directly for heavy dirt
- Apply with low pressure
- Allow to work briefly
- Rinse thoroughly with a brush or pressure washer
- For manual cleaning: use directly with a sponge or brush depending on level of dirt, or mix with water in a 1:10 ratio

Directions for use:

- Shelf life: 4 years

Warnings and safety recommendations according to EC Directives:

- S 2 Keep out of reach of children.
- S 23 Do not breathe vapour/spray.
- Z 23 Safety data sheet available for professional user on request.

Environmental characteristics:



Bottle and label 100% recyclable



Tensides biodegradable (anaerobic - OECD 311)

Please contact us for more information:

Kärcher UK

Kärcher House
Beaumont Road
Banbury
Oxon
OX 16 1TB

T: +44 1295 752 000
E: enquires@karcher.co.uk